

## Contents

Description.....	2
Features.....	2
Adjustable Attenuation.....	2
RF Filtering.....	2
L1/L2 filtering.....	2
L1 filtering.....	2
No RF filtering.....	3
Antenna/RF Line DC voltage.....	3
Antenna Current Fault Detection (Ant Fault Detect).....	3
Oscillation Detection (OSC Detect).....	3
LCD Display.....	3
LCD Backlight.....	3
Serial port control.....	4
Operation.....	4
Terminal Mode.....	4
Command Mode.....	4
LCD Display and Menu System.....	5
Menu Options.....	6
Brightness.....	6
Attenuation.....	6
Contrast.....	6
Help.....	7
Antenna Power On Off.....	7
Antenna VDC.....	7

# AT11DV USER MANUAL

<p>中国代表处:          Tel: +86-755-29644311          Fax: +86-755-29644383          Email: sales@gpssource.com.cn          Web: www.gpssource.com.cn</p>
---



## Description

The AT11XDV is a RF (L band) attenuator intended to operate with GPS frequencies and signal levels. It has one input RF port and one output RF port. Using front panel buttons or an RS232 serial port, the attenuation can be adjusted in 1dB steps over the operating range of the device.

## Features

The AT11XDV contains standard features but many described are not standard and require the addition of optional circuitry; these may not be installed and/or applicable to your device.

### ***Adjustable Attenuation***

The attenuator is capable of adjustable attenuation from 0dB to 55dB.

### ***RF Filtering***

There are three RF filtering options:

#### **L1/L2 filtering**

With L1/L2 filtering, the attenuation range provided will be in the frequency pass bands of L1, 1575.42 MHz and L2, 1227.5 MHz.

#### **L1 filtering**

With L1 filtering, the attenuation range provided will be in the pass band only, i.e., 1575.42 MHz.

### **No RF filtering**

With no RF filtering, the attenuation range will be approximately the same for all frequencies across the L band (~ 1-2 GHz see data sheet for response performance).

### **Antenna/RF Line DC voltage**

The AT11DV is capable of providing a fixed DC voltage out each RF port to power other devices in the RF signal chain. The unit can be externally powered by 110VAC/220VAC/240VAC or from a DC source a few volts higher than the desired antenna/line voltage, e.g., if you want 5 volts out then you will need to put in approximately 8 VDC into the device to overcome the losses of reverse polarity diodes, regulator losses, and diode output OR function.

### **Antenna Current Fault Detection (Ant Fault Detect)**

If the antenna current exceeds either a high or low threshold value then the device will remove power from the antenna or input port and will display an error message on the display and via serial port.

After approximately 10 to 13 seconds, the unit will retry to see if the current fault condition has been removed by clearing the error message and momentarily reconnecting power to the input port. If a high or low threshold current level is no longer exceeded then the device will once again operate normally. The exact trigger level[s] can be set via the serial port.

[\(AT11 A11XLV Serial Interface Reference\)](#)

If you do not have the serial port option, the factory defaults are low current threshold levels less than 15ma and high threshold levels greater than 150ma.

### **Oscillation Detection (OSC Detect)**

The AT11DV is capable of detecting high levels of RF indicative of feedback from the device input to the output or a runaway condition. If the OSC Detect's circuitry threshold is exceeded, the unit will remove power from the antenna or input and will display an error message on the display and via the serial port. The unit will not retry and requires a key press or equivalent character[s] from the serial port to clear the error and retry by restoring antenna power. The exact trigger level[s] can be set via the serial port. (AT11DV\_A11XLV\_Serial\_Interface\_Reference)

If you do not order the serial port option, this level is preset at the factory.

### **LCD Display**

The A11XLV can be equipped with a LCD display to provide feedback to the user.

### **LCD Backlight**

The LCD display can be equipped with an LCD backlight. The backlight is only available with the power supply option.

## **Serial port control**

The A11XLV can be controlled via an RS232 port.

## **Operation**

In normal operation, the AT11DV is controlled via the front panel using buttons. There are three buttons: UP, DOWN, and ENTER.

The unit can also be controlled via an RS232 port using a terminal emulator, either in terminal mode or in command mode, programmatically.

### **Terminal Mode**

Connection to the device is achieved by using either a standard terminal device or, in a more likely scenario, a computer utilizing terminal emulation software, such as: Hyperterm, Terra Term, Kermit etc.

The unit can be operated with computer keys in exactly the same manner as pressing the buttons on the front panel of the device by navigating through the menu with the up arrow, down arrow, and Enter key, or equivalent ESC sequences. The device will echo the text to the serial port and, in most cases, will equal or be more verbose to the front panel LCD.

Note: the letter "D" & "d" will also function as the down arrow key and the letter "U" & "u" will function as the up arrow key.

The terminal ESC sequences ESC[B] or 0x1B and then a 0x41 will function as an up arrow key.

The terminal ESC sequences ESC[A] or 0x1B and then a 0x41 will function as an up arrow key.

(If there are any dinosaurs reading this, these are VT100 terminal escape sequences)

### **Command Mode**

In command mode, the unit can be controlled or operated by sending specific commands as opposed to navigating menus via key strokes.

Though there is nothing stopping a user from sending individual key strokes, i.e., characters programmatically and navigating menus, it is neither needed nor recommended.

A command set is provided to execute functions directly so the unit can be controlled by a machine or computer as in an automatic test setup.

See the AT11DV\_A11XLV\_Serial\_Interface\_Reference for a complete list of commands.

## **LCD Display and Menu System**

From the top level of the menu, each press of the up or down button navigates the menu system. The menu system is flat, i.e., it is a loop of items that can be selected for modification or selected to display the current values or settings. Once an item is selected, the up and down button can be used to change the displayed values of the particular item. After approximately 10 seconds with no user input (button presses from the user or characters on the serial port), the menu returns to the main screen and displays gain.

## Menu Options

---

### Brightness

Sets the level of brightness of the LCD back light.

#### Instructions

1. Press middle (down) button
2. Press 'Enter'
3. Adjust brightness using up/down buttons



### Attenuation

Sets attenuation of the device.

#### Instructions

1. Press up or down button until 'Level' appears onscreen
2. Press 'Enter'
3. Adjust gain level up or down using up/down buttons



### Contrast

Sets the contrast of the LCD display.

#### Instructions

1. Press middle (down) or up button until 'Contrast' is displayed on screen
2. Press 'Enter'
3. Adjust contrast using up/down buttons



## Help

The Help menu displays the serial number of the device, the version of the firmware, and the URL of GPS Source for service and support.

### Instructions

1. Press middle (down) button until 'Help' appears on screen
2. Press 'Enter'
3. View information specific to product by using up/down arrows



## Antenna Power On Off

The Antenna operation turns the antenna power on and off.

Note: Antenna power is on the input port. This action does not affect the output port, so it will not turn off power to the devices powered by the output port, provided the output port is a pass DC (PDC) port.



## Antenna VDC

Displays the voltage that is available to power the output ports.

Note: This only displays the voltage available to the ports. If a port is DCB (DC blocked) then this does not mean there is voltage present on the port. Only if a port is enabled to pass DC (PDC) will the voltage be available on the port[s]. No matter what this reads, there will only be voltage on a port if it is PDC.

